

Operating the TDL Electronic Lock



Initially the keypad may not have batteries fitted. To insert batteries pull the door open, remove the grey cover from inside the drawer and load 4pcs 1.5V AA Alkaline batteries. Replace the battery cover.

How to lock/open my safe?

The lock will be set on a default Master code of '8 8 8 8 8 8 and a Personal code of '1 2 3 4 5 6'

- After insertion of batteries, enter either Personal or Master codes then 'Lock' to lock the safe.
 Thereafter:
- To lock the safe close the door and press 'Lock' and the door will automatically lock and the display will show 'Closed'

Note If you attempt to lock the safe by entering a code and then 'Lock' the display will show 'error' and sounds Bi Bi.

 To open the safe enter either the Master or Personal codes and the bolts will withdraw and the display will show 'Opened'. The door can now be pulled open.

How to set my own Master code?

- Open the safe and press 'Clear' twice. The display will show 'Prog'
- Enter the default code '8 8 8 8 8', the display will show 'neu'
- Enter your new Master code and the display will show 'again'. Enter your new Master code once more and the display will show 'done' meaning the new number has been successfully set.

How to set my own Personal code?

- Open the safe and press 'Clear' twice. The display will show 'Prog'
- o Enter '68' then 'Lock', the display will show 'neu'
- Enter your new Personal code and 'Lock' the display will show 'Closed' and the door will lock meaning the new number has been successfully set.

Note If at any time you are unable to open the safe using the keypad, remove the cover plate at the bottom of the circular keypad to use the supplied emergency key where indicated.

Do not store your emergency key inside the safe!

When to replace the batteries?

If the door does not open despite entering the correct user code and seeing a constant LED and hearing a melodic tone, it indicates the battery output is not strong enough to actuate the solenoid. At this point all four batteries should be replaced with new AA alkaline batteries.

IMPORTANT.

Default Master and Personal codes must be changed immediately upon safe installation.