

SafeLogic Basic Operating Instructions (Manager)

Open the safe lock.

Change Manager Code.

Add or delete the User Code.

Enable or disable the User Code.



In some instances, the Manager Code and associated Operating Instructions are not issued to the End User. In this case, simply remove this insert from the Operating Instruction.

Manufacturer default codes

- The Manager Code is set to 1-1-1-1-1-1
- The User Code is set to 1-2-3-4-5-6

MANAGER PROGRAMMING

- Always perform operations with the safe lock system unlock and the safe door open. Before closing the door, make sure all of the program changes are correct.
- **The system will not allow the User Code to be set to six zeros.**

To Change the Manager Code

- Enter "0" six times. Two beeps will sound on the final "0" indicating the entry is valid and the system is awaiting the code change.
- Enter the existing six (6) digit code. Two beeps will sound on the final digit indicating the entry is valid.
- Enter the new six (6) digit code. One final beep will sound, indicating the entry is valid.
- Re-enter the new six (6) digit code. One final beep will sound indicating the code changing process is successful.

Notes:

- If Three Beeps sound, the code change process has been unsuccessful and the existing code is still valid. Repeat code change steps above.
- **Verify the new code at least 3 times to ensure the code has been programmed correctly.**
- The system will revert to standby status if there is no key press within 10 seconds. Standby status is indicated by two short beeps.

To Add the User Code

The lock will be set on a default code of 1 2 3 4 5 6

If the user code has been deleted, follow these steps to add the User Code:

- Enter the Manager Code and hold down the last digit of this code. One beep will sound indicating a valid code entry. Continue to hold down this digit until two additional beeps sound. This indicates that the system is now in program mode.

SECURIKEY®



- Press button “1”. One beep will sound, indicating that the system is ready to receive the new User Code
- Enter a six digit code. Two beeps will sound.
- Repeat the six digit code. One beep will sound, indicating that the six digit codes entered were the same and the addition of the User Code was successful.
- If 3 beeps sound, the programming attempt was unsuccessful. Repeat the steps above.

Notes:

- If Three Beeps sound, the code change process has been unsuccessful and the existing code is still valid. Repeat code change steps above.
- **Verify the new code at least 3 times to ensure the code has been programmed correctly.**
- The system will revert to standby status if there is no key press within 10 seconds. Standby status is indicated by two short beeps.

To Disable the User Code

- Enter the Manager Code and hold down the last digit of this code. One beep will sound indicating a valid code entry. Continue to hold down this digit until two additional beeps sound. This indicates that the system is now in program mode.
- Press button “2”. One beep will sound, indicating that the system has disabled the User Code.

To Enable the User Code

- Enter the Manager Code and hold down the last digit of this code. One beep will sound indicating a valid code entry. Continue to hold down this digit until two additional beeps sound. This indicates that the system is now in program mode.
- Press button “1”. One beep will sound, indicating that the system has enabled the User Code

To Delete the User Code

- Enter the Manager Code and hold down the last digit of this code. One beep will sound indicating a valid code entry. Continue to hold down this digit until two additional beeps sound. This indicates that the system is now in program mode.
- Press button “3”. One beep will sound, indicating that the system has deleted the existing User Code
- Now follow the **“To Add the User Code”** instruction if you wish to program a user

Default User Code	1 2 3 4 5 6
Default Manager Code	1 1 1 1 1 1
Your User Code	
Your Manager code	