



## Security Safe Owner's Manual

X031ML, X041ML, X055ML, X075ML, X125ML



(GB) INSTRUCTIONS FOR USE .....	2	(FN) KÄYTTÖOHJE.....	12
(FR) MODE D'EMPLOI.....	3	(SW) BRUKSANVISNING.....	13
(DE) GEBRAUCHSANWEISUNG.....	4	(PL) INSTRUKCJA UŻYCIA .....	14
(NL) GEBRUIKSAANWIJZING .....	5	(HU) HASZNÁLATI ÚTMUTATÓ.....	15
(ES) INSTRUCCIONES DE USO .....	6	(RO) MOD DE UTILIZARE .....	16
(IT) ISTRUZIONI PER L'USO .....	7	(CZ) NÁVOD K POUŽITÍ.....	17
(PT) INSTRUÇÕES DE UTILIZAÇÃO .....	8	(RU) ИНСТРУКЦИЯ ПО ПРИМЕНЕНИЮ.....	18
(GR) ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ .....	9	(TK) KULLANIM TALİMATI.....	19
(NW) BRUKSANVISNING.....	10	(JP) 使用説明書.....	20
(DK) BRUGSANVISNING .....	11		

 : [Masterlock.eu/Safes](http://Masterlock.eu/Safes)



## Security Safe

Thank you for choosing Master Lock to store all your important documents and valuables.

We hope that this product will help you stay organized and provide you with the peace-of-mind of knowing the things most important to you are protected.


### For Key Lock Safes

Your Master Lock product is equipped with a high security key lock. Two (2) keys are provided.

### For Digital Combination Safes

#### Opening Your Safe for the First Time (Using the Override Key)

- 1 Remove the cover located between the knob and keypad.
- 2 Insert the override key provided and turn counterclockwise.
- 3 Turn the knob clockwise to open the door.
- 4 Turn key back clockwise to remove the key and replace the cover on the door.

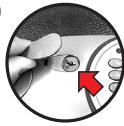


**Note:** In an emergency, situation the safe can be opened using your override key. **DO NOT store your override key inside the safe.**

#### Installing the Batteries

- 1 With the door open, remove the battery compartment cover located on the inside of the door by sliding the cover in the direction of the arrow.
- 2 Install four (4) AA size alkaline batteries.
- 3 Slide the battery cover back into place.

**Note:** Follow the polarity (+/-) markings in the battery compartment to ensure proper installation.

 **Note:** Do not use rechargeable batteries or any other type of non-alkaline battery. Do not mix old and new batteries. Do not mix alkaline and other battery types.



### Using Your Security Safe

**IMPORTANT: All security safe models initially work using the factory code 1-7-5-0-0-#.** It is highly recommended and important to the security of your valuables that you re-program the safe with a new user code. Once reprogrammed the factory code can no longer be used to open your safe.

#### Programming Your New User Code

- 1 Open the safe's door and remove the battery compartment cover.
- 2 Locate the button inside the battery compartment and press. The yellow LED light will go on.
- 3 Enter a new user code (between 2-8 digits) followed by the "#" key. The yellow LED light will go off to indicate the new code has been accepted and stored.
- 4 Replace the battery compartment cover.



**Note:** Always test a new code before storing any valuables inside the safe.

#### Unlocking Your Safe

- 1 Enter your factory code or user code followed by #.
- 2 The green LED light will go and remain on for 5 seconds.
- 3 Within 5 seconds, turn the knob clockwise and pull open the door.

#### Locking Your Safe

- 1 With the bolts retracted into the door, firmly close the door of the safe.
- 2 Turn the knob in the counter-clockwise direction to secure your safe.

### Bolt-Down Instructions

To help provide maximum security, it is highly recommended that you bolt down your safe.

- 1 Set the safe in the place you intend to bolt it down and open the door.
- 2 Using a pencil mark the floor through the holes provided in the bottom or back of your safe.
- 3 Move the safe away and drill holes of the appropriate diameter and depth for the type of hardware being used and the mounting surface.
- 4 Place the safe back over the holes and install the fasteners as required.

**Note:** It is not recommended to attempt to bolt your safe to both the floor and wall. If bolting to a wall, please ensure the safe is resting on a supporting surface such as a table or shelf.



masterlock.eu/safes

## Troubleshooting

THE PROBLEM:	WHY IT IS HAPPENING:	THE SOLUTION:
A red LED light goes on when a button is pressed.	Battery power is low.	<ul style="list-style-type: none"> <li>• Install four (4) new AA size alkaline batteries.</li> <li>• Open with override key.</li> </ul>
Digital lock is unresponsive when attempting to press in code.	Battery power is low.	<ul style="list-style-type: none"> <li>• Install four (4) new AA size alkaline batteries.</li> <li>• Open with override key.</li> </ul>
5 beeps and a yellow LED light after entering your code.	Invalid code.	<ul style="list-style-type: none"> <li>• Wait one minute and retry your code.</li> <li>• Open with override key.</li> </ul>