

COMBOGARD

33E SERIES COMBINATION LOCK

SIMPLE OPERATING INSTRUCTIONS

Enter each digit **SLOWLY AND DISTINCTLY**. The lock signals at each entry.

TO OPEN LOCK : The factory combination is 123456

- Enter your combination. The lock will signal twice.
- Turn the keypad clockwise to open the lock.

TO CLOSE THE LOCK

- Close the safe door.
- Turn the keypad anti clockwise until numbering is horizontal.

CHANGING THE COMBINATION

- Open the safe door
- Enter six zeros
- Enter old combination
- Enter new combination **TWICE**
- **INCORRECT COMBINATION CHANGE** : The lock signals three times, the old combination is still valid.
- Test the new combination several times before closing the safe.

CHANGING BATTERY (*Use only alkaline batteries*)

Repeated beeping during an opening indicates that **BATTERY IS LOW**

- Pull off battery box cover
- Replace battery(s)
- Replace cover

WRONG TRY PENALTY

- The entry of four consecutive invalid combinations will start a 5-minute delay period. The keypad flashes red at 10-second intervals.
- At end of penalty period, two more consecutive invalid combinations will restart the 5-minute delay period.

COMBOGARD

33E SERIES COMBINATION LOCK

SIMPLE OPERATING INSTRUCTIONS

Enter each digit **SLOWLY AND DISTINCTLY**. The lock signals at each entry.

TO OPEN LOCK : The factory combination is 123456

- Enter your combination. The lock will signal twice.
- Turn the keypad clockwise to open the lock.

TO CLOSE THE LOCK

- Close the safe door.
- Turn the keypad anti clockwise until numbering is horizontal.

CHANGING THE COMBINATION

- Open the safe door
- Enter six zeros
- Enter old combination
- Enter new combination **TWICE**
- **INCORRECT COMBINATION CHANGE** : The lock signals three times, the old combination is still valid.
- Test the new combination several times before closing the safe.

CHANGING BATTERY (*Use only alkaline batteries*)

Repeated beeping during an opening indicates that **BATTERY IS LOW**

- Pull off battery box cover
- Replace battery(s)
- Replace cover

WRONG TRY PENALTY

- The entry of four consecutive invalid combinations will start a 5-minute delay period. The keypad flashes red at 10-second intervals.
- At end of penalty period, two more consecutive invalid combinations will restart the 5-minute delay period.