

## LG COMBO SIMPLE OPERATING INSTRUCTIONS

Enter each digit **SLOWLY AND DISTINCTLY**. The lock signals at each entry.

**TO OPEN THE LOCK** : The factory combination is 123456

- Enter your combination. The lock will signal twice.
- Turn the keypad clockwise to open the lock.

**TO CLOSE THE LOCK**

- Close the safe door
- Turn the keypad anti-clockwise until it is straight.

**CHANGING THE COMBINATION**

- Open the safe door
- Enter six zeros
- Enter old combination
- Enter new combination **TWICE**
- **INCORRECT COMBINATION CHANGE** : The lock signals three times and the old combination is still valid.
- Test the new combination several times before closing the safe.


**CHANGING BATTERY (Use only Alkaline Batteries)**

Repeated beeping during an opening indicates that **BATTERY IS LOW**

- Remove battery compartment cover by pulling down on tab
- Replace battery
- Replace cover – (see figure 1)

*Tab on battery cover*

**Fig 1**

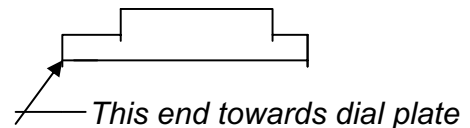

**WRONG TRY PENALTY**

- The entry of four consecutive invalid combinations will start a 5-minute delay period. The keypad flashes red at 10-second intervals.
- At the end of penalty period, two more consecutive invalid combinations will restart the 5-minute delay period.